



## LONGSPAN SHELVING SPLICE KIT ASSEMBLY INSTRUCTIONS

Important: Please follow instructions carefully when assembling this product

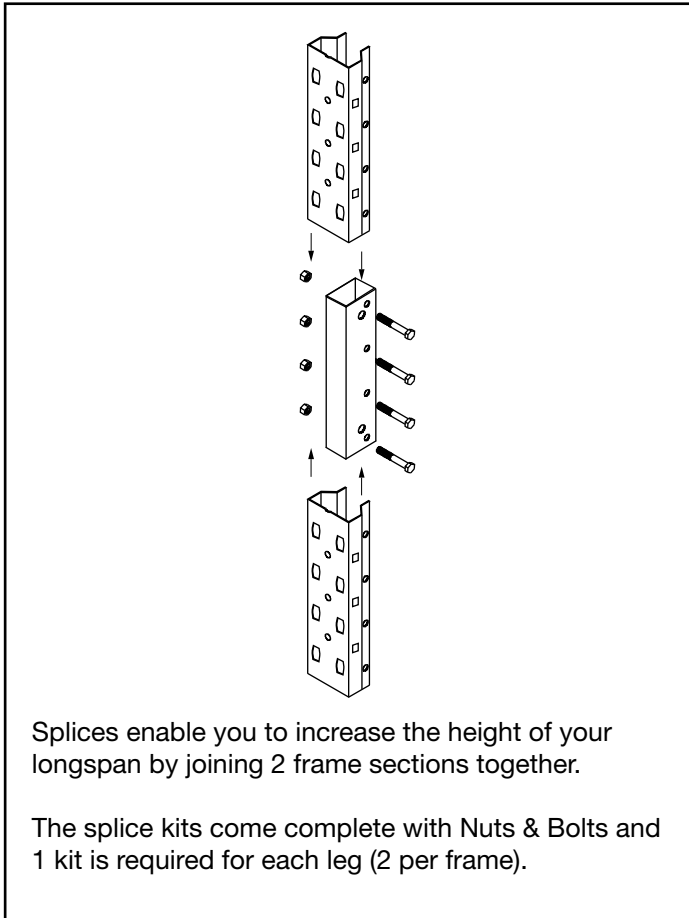


### STEP 1

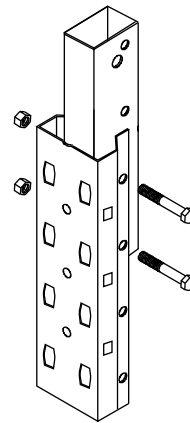

Slide the Splice Kit inside the lower frame so the top two holes of the frame line up with the lower two holes of the kit plate.


Then secure with the nuts & bolts.

### STEP 2

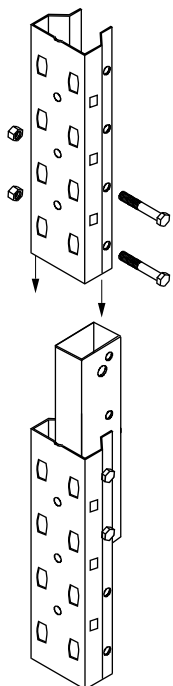

Slide the upper frame over the exposed kit and repeat Step One by inserting the frame nuts and bolts.

### STEP 3

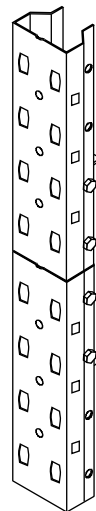

Tighten all the bolts together.

